


## IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS

TEKAILLUMINATION 40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.tekaillumination.com • info@tekaillumination.com	RELEASE DATE 08/23/2024	REFERENCE NUMBER
--	----------------------------	------------------

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF TEKA ILLUMINATION AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF TEKA ILLUMINATION IS STRICTLY FORBIDDEN.




Ø

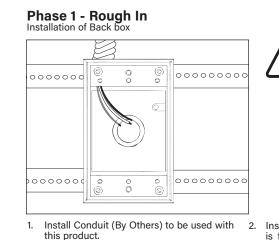


### **Additional Info**

- Please follow National and Local electrical codes for your area.
- Suitable for through wire.
- Suitable for installation into combustible materials.
- Rated for 90° C.
- Junction box, universal mounting ring screws, box mounting hardware and gaskets (By Others)
- $\underline{\wedge}$  Junction box must be secured to a structural member suitable for weight of the luminaire and other weight likely to be placed upon it.
- 2. Install junction box so that front face is flush with finished wall. Seal building envelope as per NEC.
- 3. Connect box to conduit and pull wires for connections (See wiring diagram).


### Phase 2 - Installation

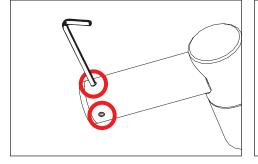


 Remove stem from adapter by loosening two (2) #8-32 set screws with a 5/64" allen wrench. Remove adapter from stem of existing fixture.

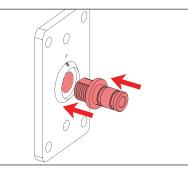


2. Thread stem adapter into canopy mounting plate 3. with existing o-ring.

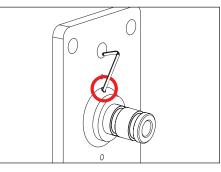


Secure installed stem adapter in canopy mounting plate by securing with #8-32 set screw using a 5/64" allen wrench.

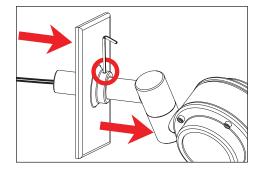

 Slide fixture leads and stem of fixture through locking ring, then decorative canopy cover. Locking ring must be facing proper direction to be flush to decorative canopy.

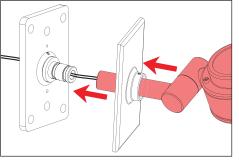

5. Thread fixture leads through installed adapter and 6. mounting plate.

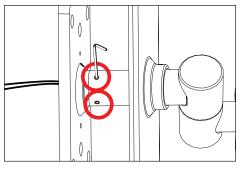

. Press stem over adapter. Secure by tightening two (2) #8-32 set screws with a 5/64" allen wrench.

## IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS



TEKAILLUMINATION

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.tekaillumination.com • info@tekaillumination.com

RELEASE DATE 08/23/2024


REFERENCE NUMBER

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE** READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

TEKAILLUMINATION

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.tekaillumination.com • info@tekaillumination.com


# US REFERENCE NUMBER



POWER SUPPLY




7. Make watertight connections using waterproof wire connectors as per lighting plan and NEC. Requirements will vary by fixture. See fixture instructions for details. **See wiring diagram.** 



0

0

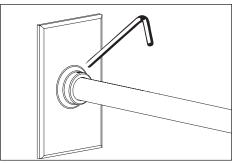

Slide locking ring and canopy cover back until mounting plate is covered. Tighten set screw on locking ring using a 5/64'' allen wrench.

**RECTANGULAR CANOPY** (CTW)

### Standard Installation



HOT

NEUTRA

(+)

FIXTURE